

**THINKY****Planetary Centrifugal Mixer  
ARV-5000**

EX-4091D

# User's Manual

**THINKY CORPORATION**

In order to operate the mixer safely, do not operate or perform maintenance on it until you read this manual carefully and understand its contents.

Store this manual in a designated location where it can be easily retrieved when needed.

---

# Contents

<b>1.</b>	<b>INTRODUCTION .....</b>	<b>1-1</b>
1-1	SYSTEM WARRANTY AND RANGE OF RESPONSIBILITY .....	1-2
1-1-1	System Warranty and Responsibility .....	1-2
1-1-2	Software Warranty and Responsibility .....	1-4
1-1-3	User's Manual Copyright and Responsibility .....	1-4
1-2	USER'S MANUAL SUBJECT DEFINITIONS .....	1-5
<b>2.</b>	<b>SAFETY .....</b>	<b>2-1</b>
2-1	BEFORE USING THE MIXER .....	2-1
2-2	MIXER OVERVIEW .....	2-2
2-2-1	Purpose of the Mixer.....	2-2
2-2-2	Features .....	2-2
2-2-3	Specifications .....	2-3
2-3	DANGER/WARNING/CAUTION NOTICES IN THE TEXT .....	2-4
2-3-1	Danger Level.....	2-4
2-3-2	"Serious Injury", "Minor Injury" Definitions .....	2-5
2-3-3	Symbols .....	2-6
2-4	RISK WARNING LABELS .....	2-7
2-4-1	Risk Warning Label Types .....	2-8
2-4-2	Risk Warning Label Application Locations .....	2-9
2-5	SAFETY MEASURES.....	2-12
2-5-1	Safety Precautions.....	2-12
2-5-2	Drive Component Safety Precautions.....	2-15
2-5-3	High Voltage Components Safety Precautions .....	2-15
2-5-4	Precautions for Hazardous, Poisonous, and Toxic Substances .....	2-16
2-5-5	Precautions for High Temperature Components.....	2-16

---

## Table of Contents

2-5-6	Signal Tower .....	2-17
2-5-7	Safety Interlock System .....	2-18
2-5-8	Door Lock Release .....	2-19
2-6	HANDLING PRECAUTIONS .....	2-20
2-7	EMERGENCY OPERATIONS.....	2-21
2-7-1	Emergency Off Switch (EMO).....	2-21
2-7-2	Recovery from Emergency Stops .....	2-22
<b>3.</b>	<b>MIXER CONFIGURATION AND NAMES .....</b>	<b>3-1</b>
3-1	MIXER FRONT .....	3-1
3-2	MIXER REAR .....	3-2
3-3	ACCESSORIES.....	3-3
<b>4.</b>	<b>HOW TO INSTALL/CONNECT .....</b>	<b>4-1</b>
4-1	INSTALLING THE MIXER .....	4-1
4-1-1	Mixer Location.....	4-1
4-1-2	Storing the Casters .....	4-1
4-1-3	Attaching the Trap.....	4-2
4-1-4	Remove Shipping Locks .....	4-2
4-2	CONNECTING THE POWER SUPPLY.....	4-3
<b>5.</b>	<b>OPERATIONS .....</b>	<b>5-1</b>
5-1	SWITCHING ON THE POWER SUPPLY AND LOGGING IN .....	5-1
5-2	MEASURING MATERIALS .....	5-3
5-3	INSERTING THE CONTAINER & SETTING ROTATIONAL BALANCE .....	5-4
5-4	PREPARING FOR OPERATION AND LOAD RECIPE.....	5-8
5-5	CREATING / MODIFYING AN OPERATION RECIPE .....	5-10
5-6	SAVING RECIPES.....	5-14
5-7	STARTING OPERATIONS & FORCED STOPS .....	5-18
5-8	REMOVING THE CONTAINER .....	5-20
5-9	SYSTEM MENU.....	5-22

## Table of Contents

5-9-1	Accumulated Hours.....	5-23
5-9-2	System Version .....	5-24
5-9-3	Language .....	5-24
5-9-4	Clock Set.....	5-24
5-10	MISCELLANEOUS MENU .....	5-25
5-10-1	Vacuum Pump Shutdown Operation Function.....	5-26
5-11	ERROR RESET .....	5-27
5-12	SYSTEM LOG OUT.....	5-28
<b>6.</b>	<b>TROUBLESHOOTING .....</b>	<b>6-1</b>
6-1	ERRORS .....	6-1
6-2	ABNORMAL NOISE OCCURRENCES .....	6-2
<b>7.</b>	<b>MAINTENANCE MANAGEMENT .....</b>	<b>7-1</b>
7-1	DAILY INSPECTION.....	7-1
7-2	MONTHLY INSPECTION.....	7-1
7-3	CLEANING INSIDE THE MIXER.....	7-1
7-4	VACUUM PUMP INSPECTION .....	7-2
7-4-1	Replenishing the Oil.....	7-2
7-4-2	Changing the Oil .....	7-3
7-5	CHANGING THE BATTERY .....	7-4
7-5-1	Low Battery Level .....	7-4
7-5-2	Dead Battery .....	7-4
7-5-3	Changing the Battery .....	7-4